

## The procedures for updating the firmware

**Step 1:** Connect the unit and the computer by a COM port, and then turn on the unit.

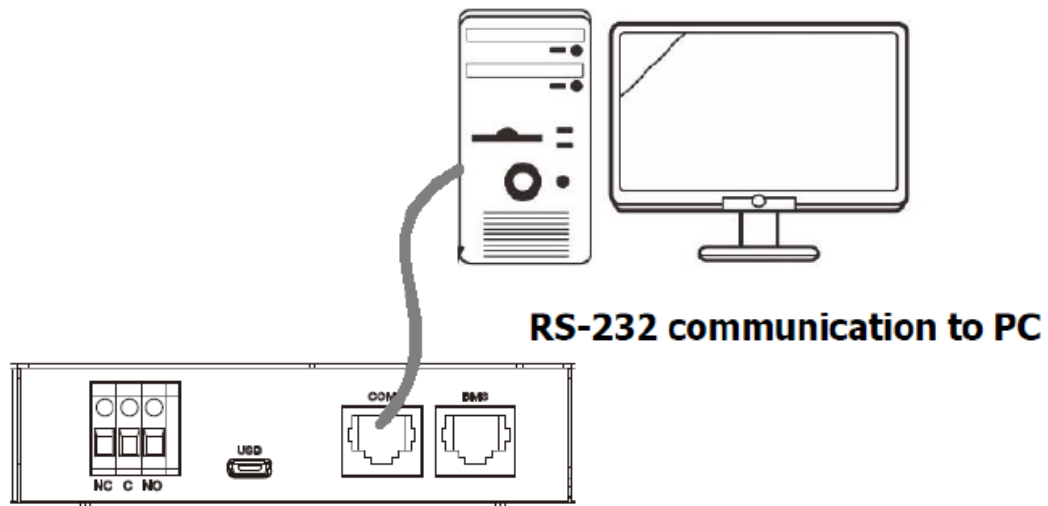


Figure 1

**Step 2:** open the file and execute [ArenaINVReflashTool.exe](#).

**Note:** [ArenaINVReflashTool.exe](#) can only be executed in OS of windows

**Step 3:** select the correct com port

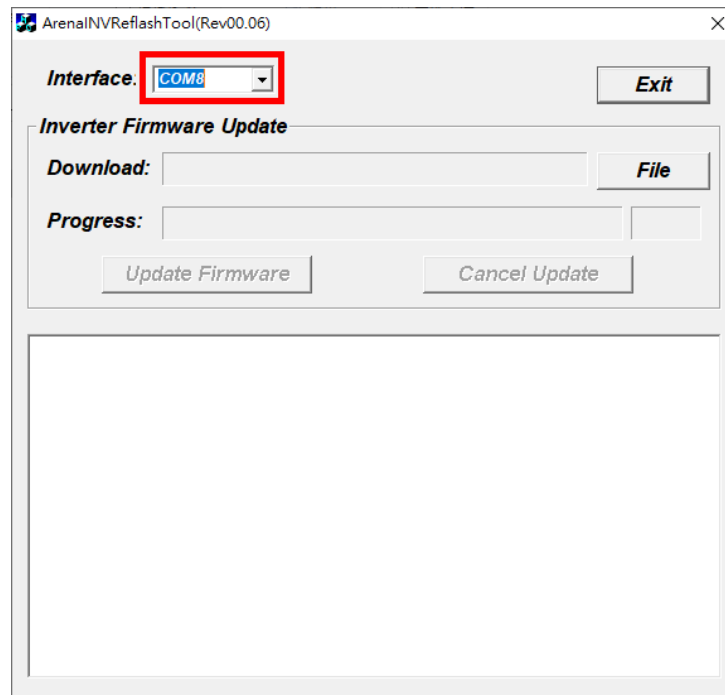


Figure 2

**Step 4:** select the firmware which is to be updated;

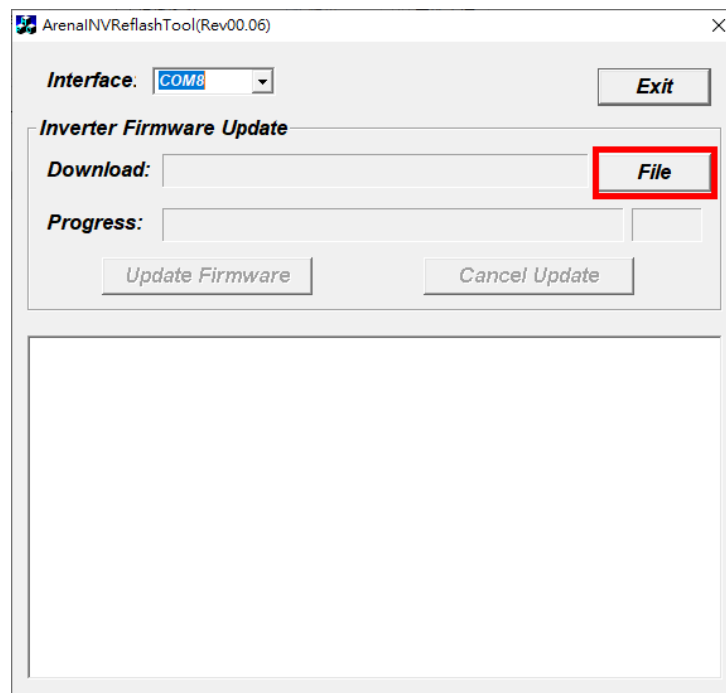


Figure 3

Select the firmware file xxx.inv in release firmware package, by double clicking it.

**Step 5:** Click button , and then wait till programming

complete. Please **DON'T** press  button!

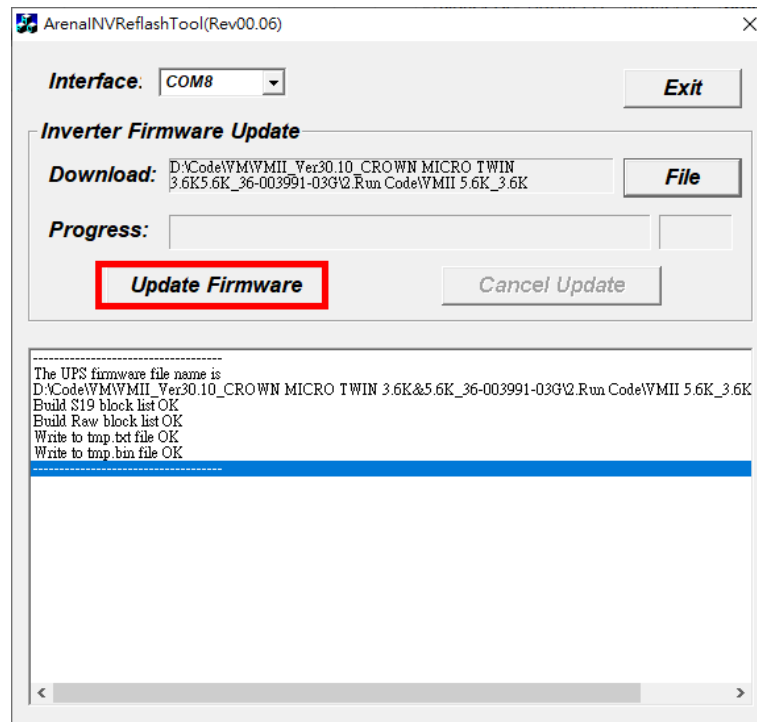


Figure 5

**Step 6:** When the processing bar is up to 100%, below dialog will pop-up to remind you the programming is successful! Now the software is updated completely! (Figure 7)

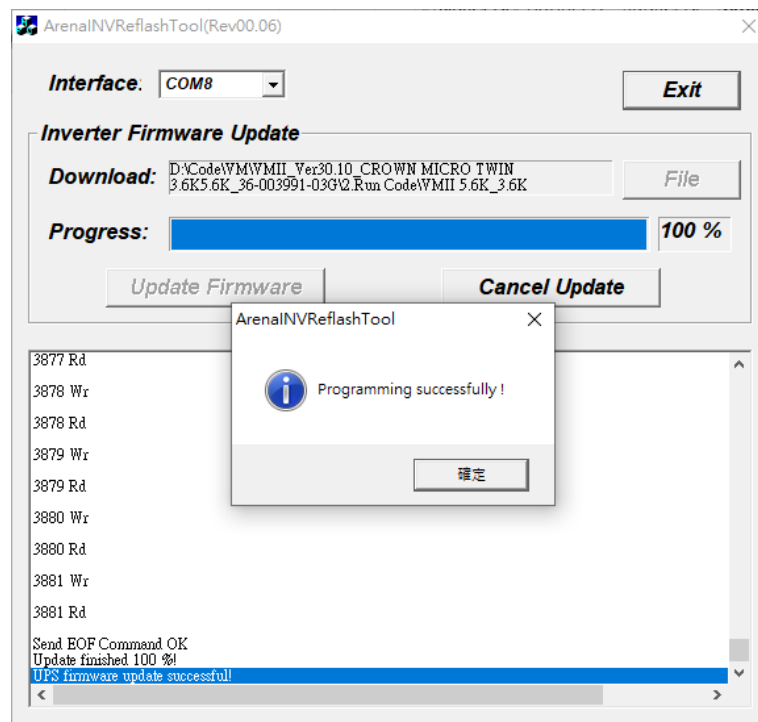


Figure 6

### Application Notes:

1. If you want to update another unit, don't close "UPSReflashTool.exe", and restart from Step 4.
2. If programming is break in step 5, "read data Err" string will remind you (Figure 8) programming failed, this may because of communication lost. Please close "UPSReflashTool.exe", then restart from Step 4.

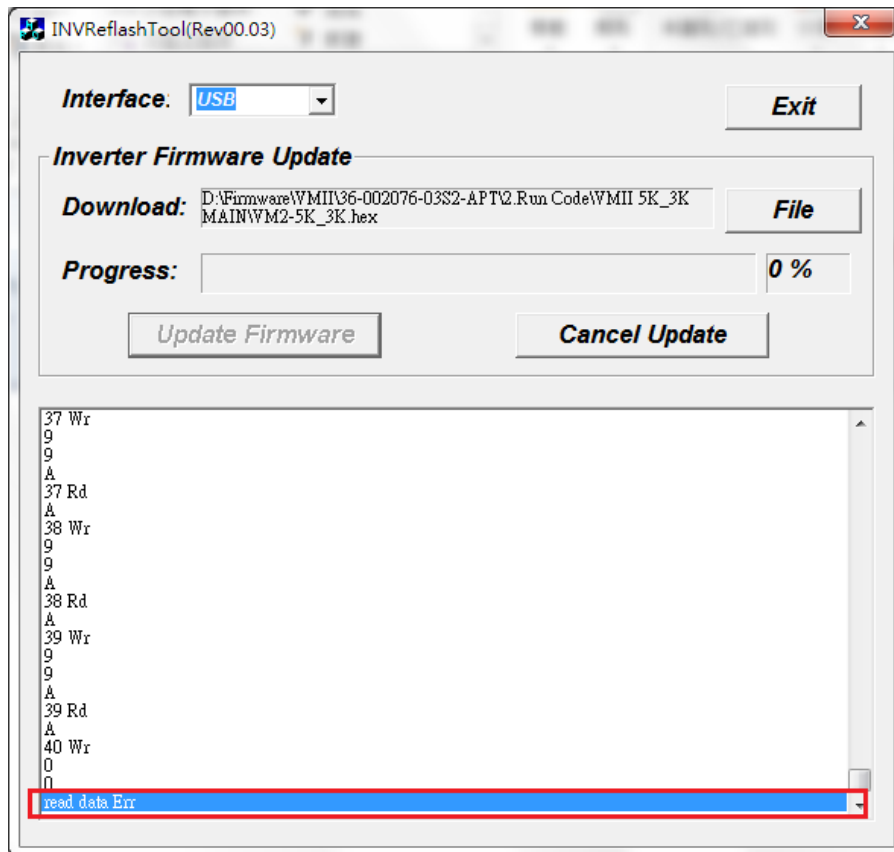


Figure 7